

## INNER BEZEL SETTING

pull out to engage inner bezel ratchet 1 unscrew anti-clockwise

Turn clockwise while holding crown in engaged position. Bezel will turn anti-clockwise.


NB: DO NOT TURN CROWN ANTI-CLOCKWISE

push in to disengage inner bezel ratchet 5 lock crown

**Note:** Bezel is unidirectional. If crown is turned anti-clockwise while bezel ratchet is engaged, it will damage the pulley.



TIME + DAY/ DATE SETTING

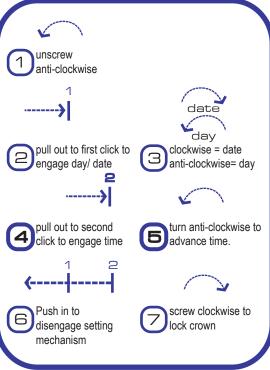

**Note:** Day display is bi-lingual (chinese/ english).

Once it is set to the preferred language, it will remain so.
'0' on date display denotes the start of the month hence is indicative of '1' on a regular calender

